 



VP422^{10A} HDTV QUICKSTART GUIDE

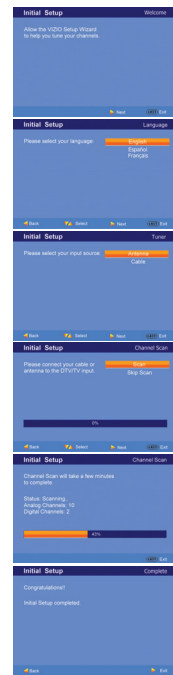

se the HDMI (best) or Component connection.

NOTE: Composite and S-VIDEO Cables can only be used for SD (480i) pictures.

- ① Turn on your Cable Box, VCR, External TV Tuner or Satellite Receiver and you will see a picture on your TV set. If there is not a picture, make sure you have selected the correct input on the TV set.
- ② If the selected input is RF connection, you should be aware that the TV set needs to be on either channel 3 or channel 4 matching the channel which has been selected on the back of the VCR, Cable Box, External TV Tuner or Satellite Receiver; please refer to Owner or User's Manual of such equipment for details.

NOTE: The TV set will be displaying any television station or program selected by the Cable Box, VCR, External Tuner or Satellite Receiver. The TV set will not be able to change programs or channels; this is controlled by the equipment sending the signal. If the service being used includes a box with two different outputs for two different (distant) rooms, then scanning channels should help to find the signal. Be aware that the channel to be selected varies from provider to provider, meaning you may have to call your provider company so they can provide you with the specific channel to use with high-definition TV sets. Some examples of these channels are: 105, 106, 115 and 116.

3 Fine Tuning your TV for Home Use.

After completing either Procedure 1 or Procedure 2, please follow the steps below to optimize your TV set display:

1. Press the **MENU** key to bring up the Menu display. Use the **▼** or **▲** button to scroll to the Color Temperature option.
2. Press the **▶** button to select it.
3. Press either **▶** or **▲** button to change setting to Normal, and then press the **LAST** key again to go back to previous screen.
4. Press either **▼** or **▲** button to select the Picture Mode option.
5. Press either **▶** or **▲** button to change the Picture Mode option to Standard.
6. Press the **LAST** key repeatedly to exit the on screen display Menu.



NOTE: If you followed Procedure 1, take the following steps to ensure that the correct program times are shown when pressing the Guide key:

Press the **MENU** key, which will bring up the picture mode menu.

Pressing either the **▶** or **▲** button, scroll across to the icon showing the little satellite dish or antenna. The next screen will appear showing

Time Zone; using either the **▼** or **▲** button, select it, and finally by

pressing either the **▶** or **▲** button, choose the proper Time Zone for your area. Press the **LAST** key repeatedly to exit the on screen display Menu.

