



Before You Begin

- Verify all of the contents of your accessory package
- Review safety guidelines in Owner's Manual
- Place your High Definition TV so that the rear connectors are accessible
- Install AA batteries into the VIZIO Remote Control
- Write down your VW22L 10T Serial Number (located on the back)


Contents:

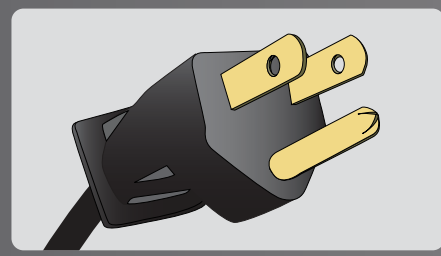

Power Cord

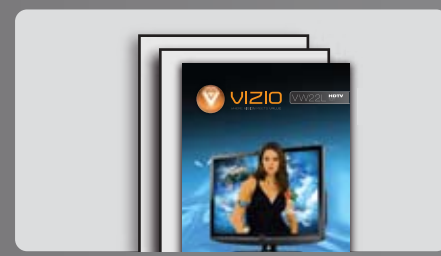

VIZIO HDTV User Manual, and Registration Card.

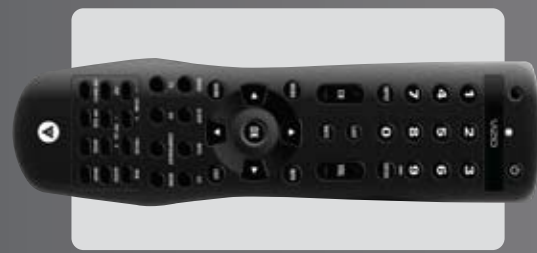


Remote Control

Includes 2 AA Batteries

The Best Connection

For the best quality picture, we recommend using HDMI, DTV, RGB or Component inputs when possible. These are the only inputs capable of high definition (HD). Using these inputs does not guarantee high definition unless a high definition source is connected. However, not all equipment is capable of these connections. TV, AV and S-Video are not capable of HD signals.

+ Both DTV and TV share the same port. The television will automatically register which input type is connected.

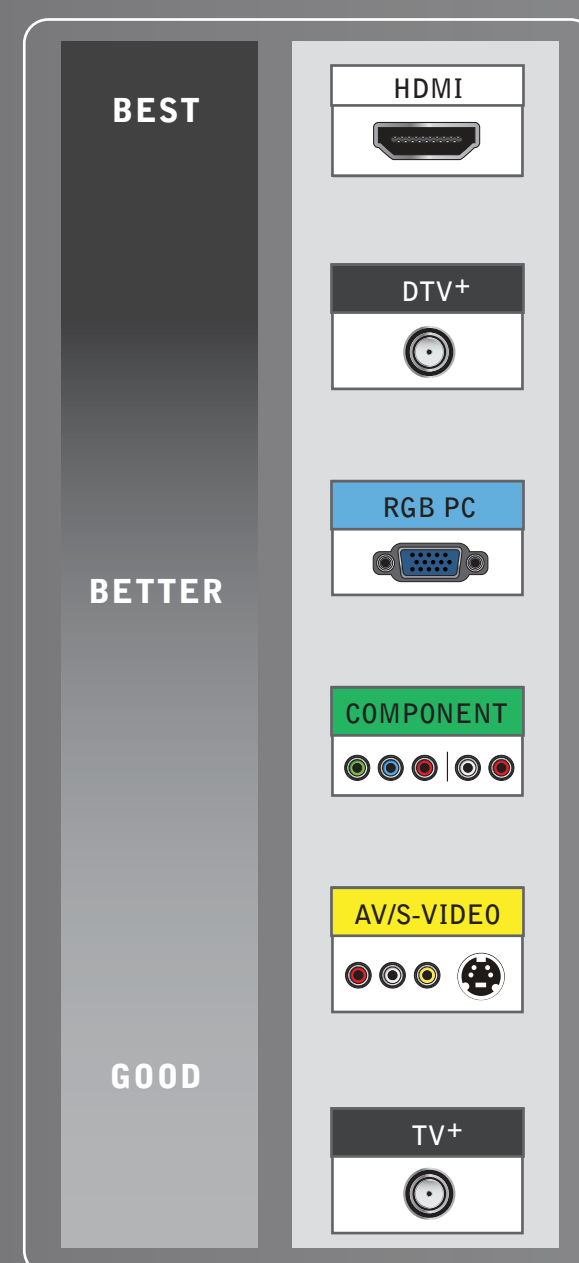

Four Easy Steps Simply follow our color-coded Step Charts and you're done.

1) Choose items to connect to your VIZIO HDTV

- Determine which type of Signal Source and any Additional Equipment you wish to connect to your VIZIO HDTV.
- The colored dots under each Signal Source and Additional Equipment indicate which type of connections you may use to connect to your VIZIO HDTV.

2) Choose equipment connection methods

- Using the colored dots from Step One, follow the row across to Step Two to match up the colored dots to the same colored connection method.
- Choose ONLY one method for each piece of equipment.


3) Select cables and make connections

- Once you have determined the connection methods from Step Two, follow the row to Step Three to determine what kind of cables you need and what the connections look like on your equipment.
- Following the color-coded system, use the appropriate cables and connect your Signal Source and Additional Equipment to the color-coded inputs on your VIZIO HDTV. (Refer to **Connection Map** at bottom of page.)
- Once connected, turn on your VIZIO HDTV and all your equipment.

4) Use your VIZIO HDTV

Follow the programming instructions on the other side of this guide.

- If you are using the DTV/TV input, turn over this guide and follow Procedure 1.
- If you are using an input other than DTV/TV, turn over this guide and follow Procedure 2.

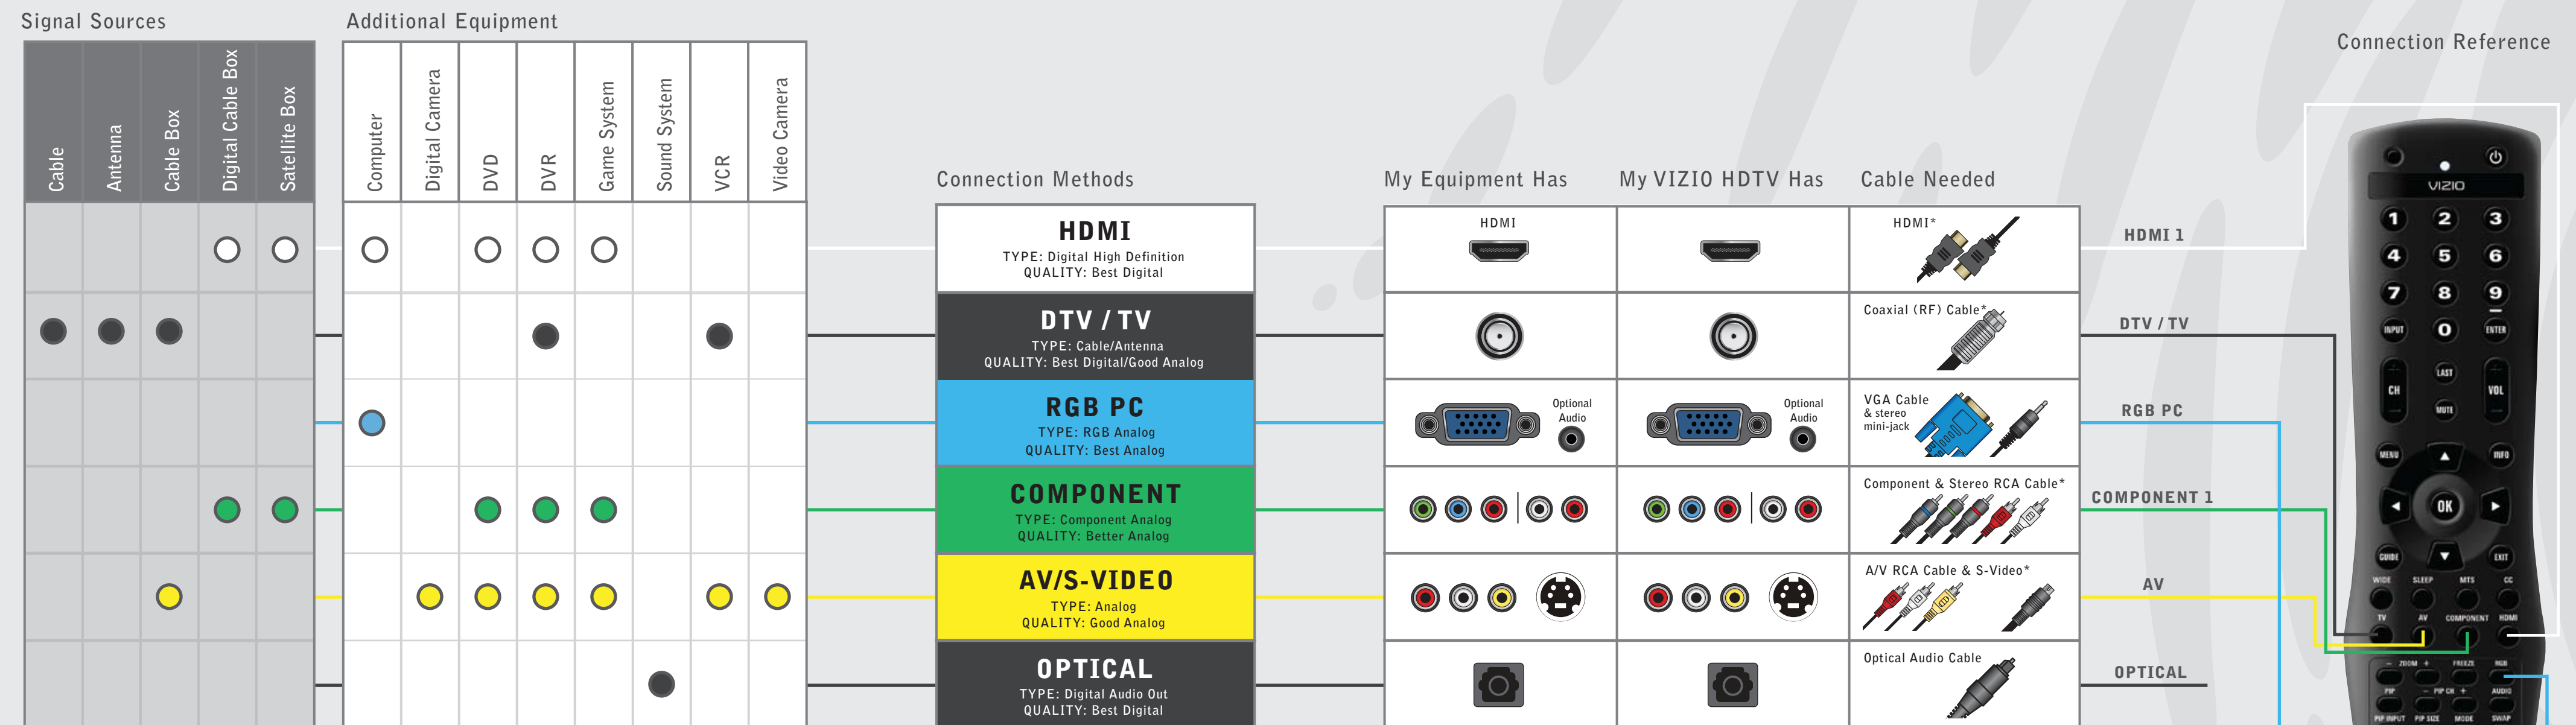


For additional help with connecting components to your VIZIO TV, visit <http://ceaconnectionsguide.com> for an interactive guide

In need of a particular cable to make the connection you want? VIZIO-certified cables are available at www.VIZIO.com (view back for more details).

3 WAYS TO GET HDTV

- 1) Off-Air antenna (using the DTV antenna input). To see if you are able to receive HD signals off-air and for help choosing the right antenna, visit www.antennaweb.org.
- 2) Cable - Subscribe to HD programming through your local cable company (HD cable box required).
- 3) Satellite - Subscribe to HD programming through Direct TV or Dish Network (HD satellite receiver required).

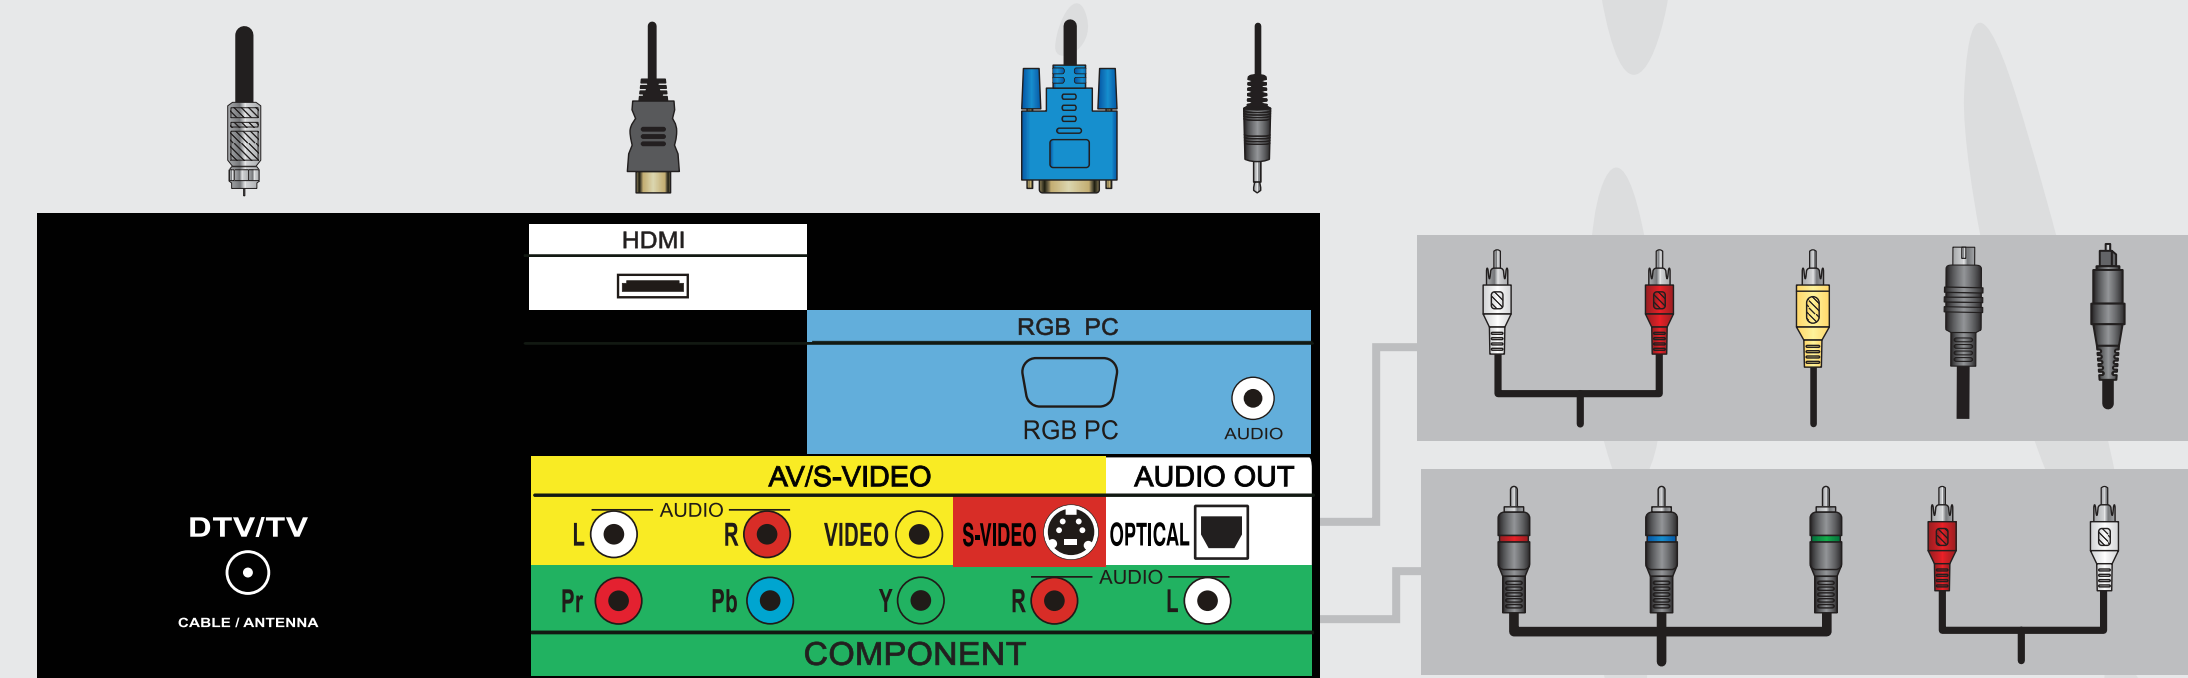

BACK OF TV

For more information, see your Owner's Manual, Chapter 2, CONNECTING EQUIPMENT.



VIZIO provides installation services, cables & wall mounts (see details for Optional Components on back). Visit www.VIZIO.com or call 1-888-849-4623 to order today.




Programming your TV to Receive and Display Channels: All you need is your Remote Control.

1 Attaching the Base


STEP 1.1

Important: The Base of the HDTV must be assembled prior to usage.

- A Place the VW22L face down on a soft and flat surface (blanket, foam, cloth, etc.) to prevent any damage to the HDTV.
- B Carefully align and insert the Base to the stand (please refer to the illustration to the right).
- C Gently push the Base towards the HDTV until the locking mechanism locks into place.

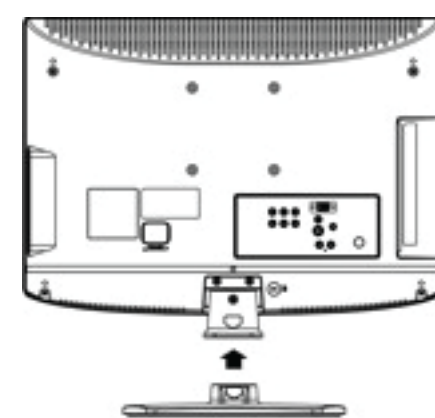

- D Insert the provided M4-16mm screw to the bottom of the base (as shown on the illustration to the left).
- E Use a Phillips screwdriver to tighten the Base to the stand.

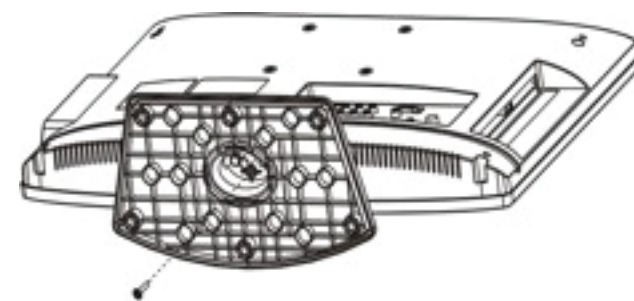

2 Receiving Channels through DTV/TV Input using Regular Antenna or Regular Cable Service (No Box) Signals.


STEP 2.1

- A Connect your signal source (cable from antenna or cable from the wall for Cable Service without box) directly to the DTV/TV RF (commonly named COAXIAL) connector.



STEP 2.2


- A Turn on the TV; press the **MENU** key to obtain the above display. By default the TV will show over the air (OTA) signal, press **OK** button to highlight Tuning Band. Press **OK** again if the signal is cable service. Press the **Auto** button to select Auto Search, for either OTA or Cable Service the following display will show up.
- B Please wait for the TV to complete this process or press the **EXIT** key to cancel the scanning process.
- C After completing the scanning, the display will show the first found channel.

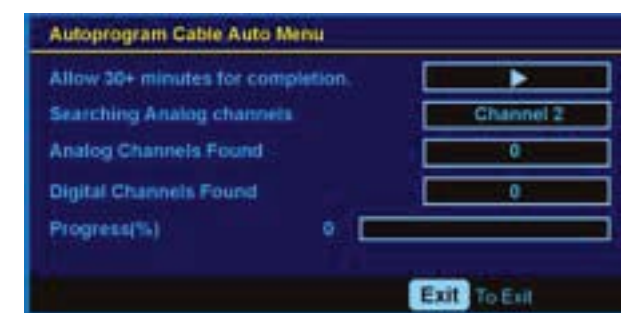

3 Displaying Channels from different Signal Sources (External TV Tuner, VCR, Cable Box or Satellite Receiver) through different Inputs.

STEP 3.1

- A Select the correct input connection; RF (DTV/TV)* connector, Composite (Yellow, Red and White)* connectors, Component (Red, Green, Blue plus Red and White)* connectors, HDMI* connectors or S-Video (AV)* plus Red and White connectors (if applicable). Make the physical connection or hook up.

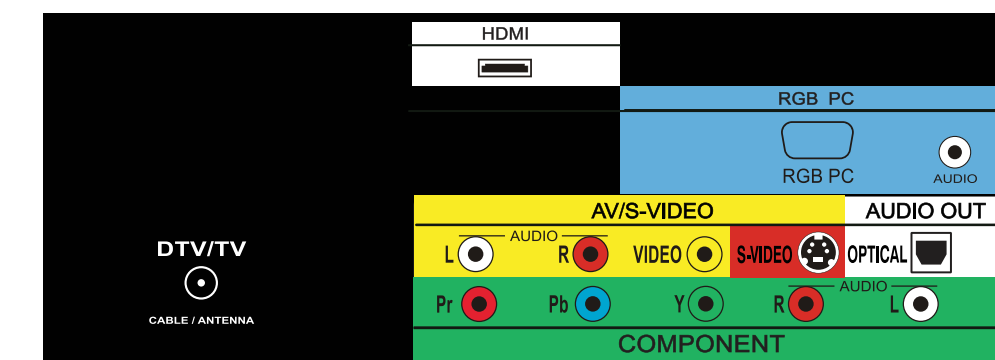

STEP 3.2

- A Turn on the TV set
- B Select the input by pressing the button corresponding to that specific type of connection on the remote control.
- C If you have an HD service you must use the HDMI (best) or Component connection.

NOTE: Composite and S-VIDEO Cables can only be used for SD (480i) pictures.

- D Turn on your Cable Box, VCR, External TV Tuner or Satellite Receiver and you will see a picture on your TV set. If there is not a picture, make sure you have selected the correct input on the TV set.
- E If the selected input is RF connection, you should be aware that the TV set needs to be on either channel 3 or channel 4 matching the channel which has been selected on the back of the VCR, Cable Box, External TV Tuner or Satellite Receiver; please refer to the Owner or User's Manual of such equipment for details.

NOTE: The TV set will be displaying any television station or program selected by the Cable Box, VCR, External Tuner or Satellite Receiver. The TV set will not be able to change programs or channels; this is controlled by the equipment sending the signal. If the service being used is the one which setup includes a box with two different outputs for two different (distant) rooms, then scanning channels would help you to find the signal. Be aware that the channel to be selected varies from provider to provider; meaning that, you may have to call your provider company so they could provide you the specific channel when using high definition made TV sets. Some examples of these channels are: 105, 106, 115 and 116.

*For Your Information:

- A Coaxial connection (RF connector) is recognized as the threaded connector, commonly called cable, screw on or coaxial connector which carries the image (picture) and sound (audio) through a single cable.
- B Composite connection (RCA connectors) is recognized by the three (yellow, red and white) standardized color coded RCA connectors. Yellow carries the image (picture); red (right channel) and white (left channel) carry the sound (audio) of the signal.
- C Component connection (RCA connectors) is recognized by the three (green, blue and red) standardized color coded RCA connectors for image (picture) plus the two (red and white) standardized color coded RCA connectors for the sound (audio) of the signal.
- D HDMI (High-Definition Multimedia Interface) connection (HDMI connector) is recognized by the standardized elongated D-Shaped connector which carries both the image (picture) and the sound (audio) of the signal through a single cable.
- E S-Video (separate video) connection (4-pin Mini-DIN connector) is recognized by the small connectors at the end of a cable with multiple pins in it. This connection carries only the image (picture) of the signal; therefore, there is a need to supply a separate sound (audio) signal by using the two (red and white) standardized color coded RCA connectors.


Programming Your Cable or Satellite Box Remote

Consult your Cable or Satellite Owner's Manual to determine if you need a 3, 4 or 5-digit code. If your Cable or Satellite Box requires:

- 3-digits, please use "627" (This code usually works with DISHNetwork.)
- 4-digits, please use "1758", "0178" or "0128"
- 5-digits, please use "11758", "10178" or "10128" (These codes usually work with DIRECTV.)

Your new TV set is now ready

to automatically reproduce the best picture quality from the input signal being fed into it. Enjoy your VIZIO HDTV.

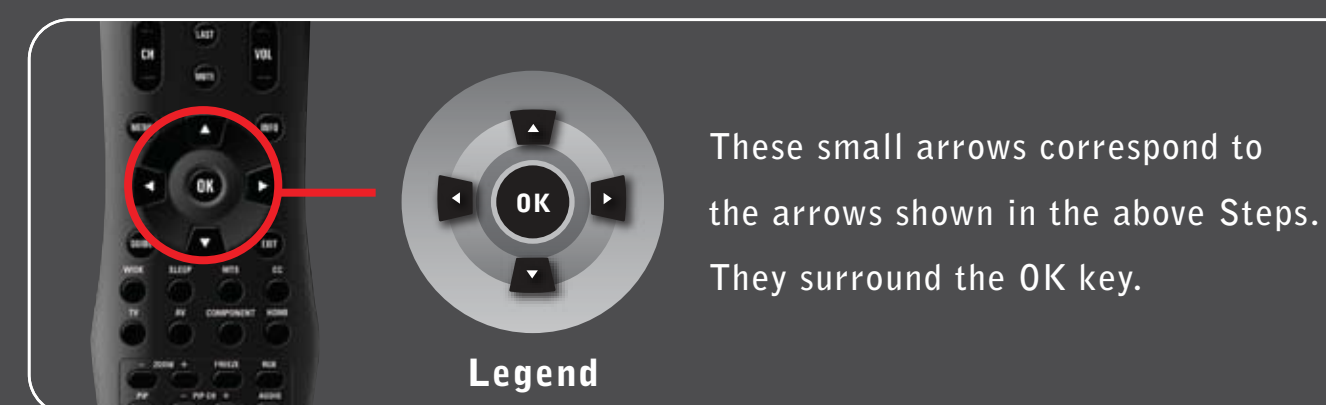

These small arrows correspond to the arrows shown in the above Steps. They surround the OK key.

Optional Components



ENHANCE YOUR VIZIO EXPERIENCE

When it comes to components and accessories, don't settle for less than VIZIO. We offer a full line of products specifically designed to accentuate your VIZIO HDTV. To learn more about how you can enhance your VIZIO experience, call 888-849-4623 or visit www.VIZIO.com.

VIZIO HIGH-DEFINITION CERTIFIED CABLES

Our VIZIO Certified HD cables carry the same standards of excellence as all our VIZIO products. Available in: DVI, HDMI and Component in lengths of 2, 5, and 10 meters.

VIZIO CERTIFIED MOUNTS

FLUSH MOUNT- turn your HDTV into a work of art
TILT MOUNT- adjust your HDTV for the most comfortable viewing position
ARTICULATING ARM- position your HDTV exactly where you want it

