


K1-A2-B Installation Instructions

Tools Needed



Included Hardware

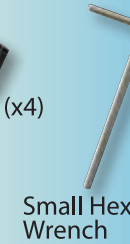

1 Wood Stud Wall Locate a Wall Stud




To avoid property damage or injury, attach the TV wall mount to a wood stud.

2 Drill Mounting Holes

- Position the wall plate so that the holes align with the middle of a stud.
- Mark the wall at each of the hole positions.
- Drill holes with 3/16" drill bit, 2-1/2" deep and go to step 3.



3 Screw Plate to Wall

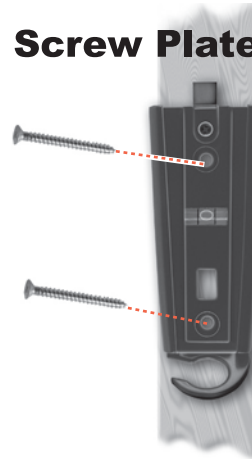

4 Attach the Screen



Caution: Test the screw length to ensure that they do not extend past the screen hole depth and damage the screen.

Using this mount with screens heavier than the maximum load weight (30 lbs.) may result in instability and cause injury.

Determine the correct screw length for your screen.

- Use M4x12 screws if back of display is flat and mounting holes are flush with the surface.
- Use M4x30 screws if back of display is curved or protrudes. If holes are recessed use with the black spacers.

5 Slide Mount into Wall Plate

Use small hex wrench to secure at bottom.



6 Adjust tilt

Use hex wrenches to adjust and set swivel and tilt desired.



7 Manage cords

Feed cords through center of arm.

1 2 Concrete Wall Drill and Install Anchors

Keeping wall plate level, mark and drill 1 5/8" holes using a 5/16" masonry bit. Tap the supplied concrete anchors into holes.